

Model CSD1X2

Drop-In Ceiling Speaker

with Back Can


70V & 25V Speaker Systems

BOGEN®

Electrical Connection

1. Remove electrical box cover, then install cable clamp (if desired) and feed interconnecting cable into the electrical box.
2. Select speaker leads for desired system type: 70V - Red, 25V - Yellow, and COM - Black for both. Interconnect the speakers in the system, making sure that all leads of the same color are connected together. Avoid swapping colors.
3. Cut bare wire tip off of unused speaker lead. Secure all mechanical connections and re-install electrical box cover.
4. Set tap selector switch to proper tap setting.


NOTE: All wiring must comply with NFPA 70

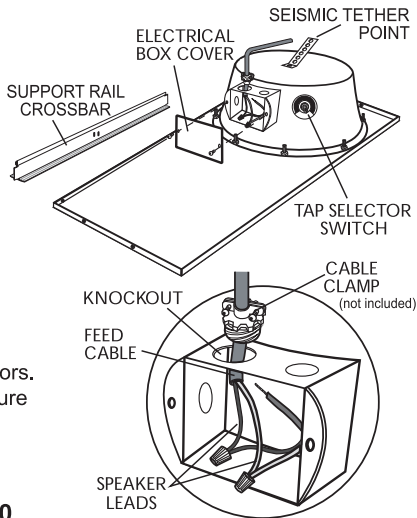

Ceiling Installation

1. For 2 ft. x 4 ft. tile space, cut ceiling tile to 35-1/2" long.
For 2 ft. x 2 ft. tile space, cut to 11-1/2" long.
2. Place speaker in ceiling opening.
3. Slide Tile Support Rail under speaker edge beside opening.
4. Drop in the tile.

Lead	Color
70V	Red
25V	Yellow
COM	Black

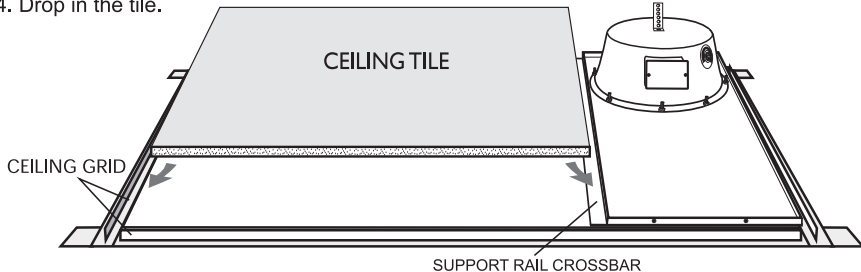

Listed to UL Standard - ANSI/UL 1480

2-YEAR WARRANTY

The **CSD1X2** is warranted to be free from defects in material or workmanship for two (2) years from the date of sale to the original purchaser. This warranty does not extend to any of our products that have been subjected to abuse, misuse, improper storage, neglect, accident, improper installation or have been modified or repaired or altered in any manner whatsoever, or where the serial number or date code has been removed or defaced.

MADE IN XXXXX

Specifications subject to change without notice
© 2004 Bogen Communications, Inc. 53-2070-01H 1211

ETL CLASSIFIED



Intertek
XXXXXXX
CONFORMS TO
UL STD 1480

BOGEN®
COMMUNICATIONS, INC.

50 Spring Street, Ramsey, NJ 07446 USA
Tel. 201-934-8500 • Fax: 201-934-9832

www.bogen.com